



INSTALLATION AND USER GUIDE : E9001 Energetic Vitaliser

When you have bought your E9001 there are a few guidelines to follow:

1. Keep the unit in an upright position fixed to the wall, roughly 15-20cm / 6-8" above the floor. It should be located on the lowest floor of the property under or near the bedrooms of any persons who suffer from restless sleep or who are in the worst general health. If possible, underneath the bedrooms is preferable. If this is not possible, the unit can be located near the middle of the property, on the lowest floor.
2. Do not install within 1.5 feet / 0.5 metres of large steel objects like refrigerators, radiators, steel cabinets etc. This also applies through walls. If done so, this will slightly reduce the product's performance.
3. The only regular maintenance is to keep the unit clean and dry.
4. If you move, this is no problem, just install in the new premises according to these instructions. Even if the Geopathic Stress and Electro Stress levels are lower the unit still acts as an energy booster for all the inhabitants, due to the unique Geomack Energetic Vitalising Technology, which is utilised in every Geomack model.
5. There are occasions when having a Geomack system installed, some people initially experience a slight headache, tingling in the fingers or feet, for example. This is a good sign, as the Geomack unit is releasing the effects of Geopathic Stress and Electro Stress and the body is responding and re-adjusting to the new improved environment created by the unit.

A Geomack Energetic Vitaliser silently works to keep your home or workplace free from Geopathic Stress and combats the effects of Electro Stress. So by installing a Geomack system you will be welcomed into a better and environmentally safer atmosphere.

Specification:

Dimensions: 10.2 x 7.6 x 74.8 cm / 4" x 3" x 29 1/2" (Depth x Width x Height)

Coverage: Covers a ground area of up to 200 square metres / 2000 square feet

Coverage figures are based upon the footprint of the property (ground area of the lowest floor). The reason one only looks at the lowest floor of the property, is that higher floors are automatically covered by the products' protective energy field. The only exception to this is in locations where there is a high level of Electro Stress, like very near pylons or mobile phone masts, for example, where it might be advantageous to also have an additional unit on a higher floor of the property, where the inhabitants might sleep.

If the footprint of the property is over 200 sq m / 2000 sq ft, then multiple E9001, each covering up to 200 sq m / 2000 sq ft, are required to cover the property.

If you would like more information on the Geomack range of Energetic Vitalisers, please visit:

www.geomack.com

Please see next page for fixing diagram

INSTALLATION DIAGRAM: E9001 Energetic Vitaliser

Angled nail for wood or brick wall
Or appropriate screw for plasterboard (drywall)

